 




Neato Botvac 80 Top Face Panel Replacement

A prerequisite only guide used to remove the top face panel of the robot.

Written By: Brandon Blank

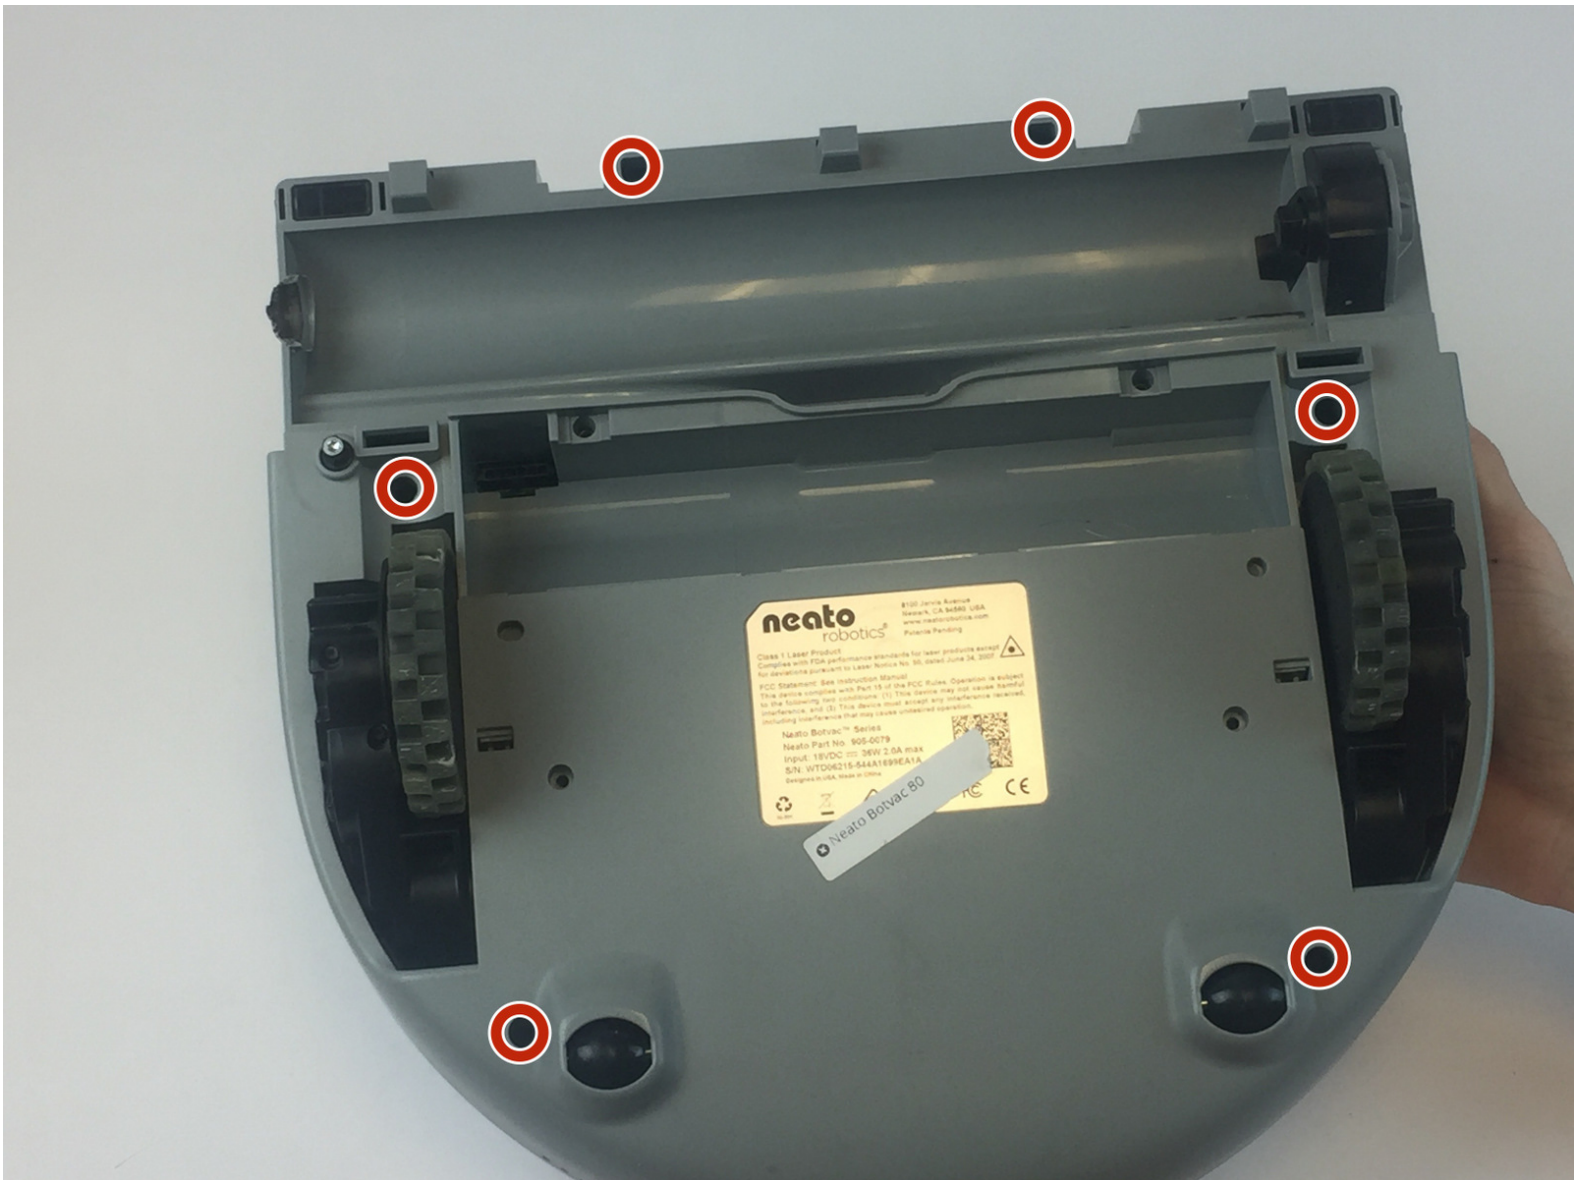



TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Rear Bumper



- Grab the rear bumper with both hands on either side.

Step 2



 
- Gently pull the bumper down and back at an even pace.

Step 3 — Top Face Panel




- Looking from above, remove the two 11mm screws with a torx T10 screwdriver.

Step 4

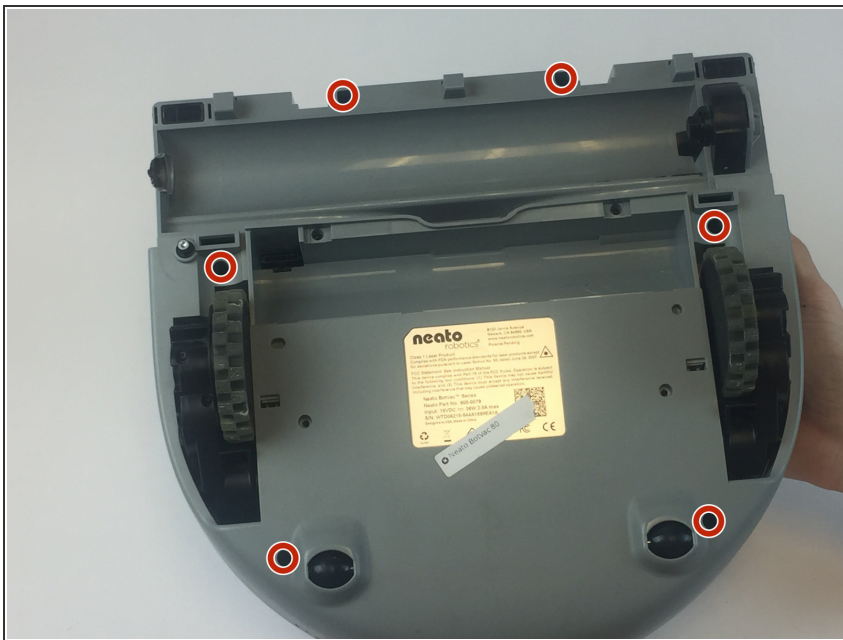


- Begin by placing the robot on it's back and removing the six 11m screws using a Torx T10 screwdriver.

 Step 5

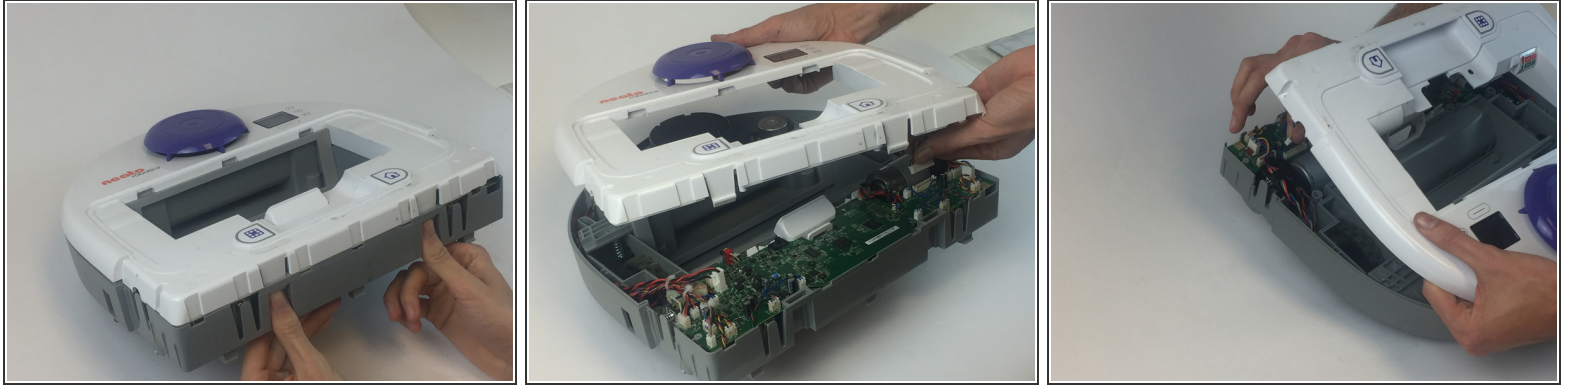

- To remove the top, you must press in both of the clamps at the same time and push upwards.

 When removing the top, before you can completely take it off you must unplug the LCD power cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:58:52 AM.